


LG Programmable Logic Controller  
Analog to Digital Conversion Module  
MASTER-K K3F-AD2A

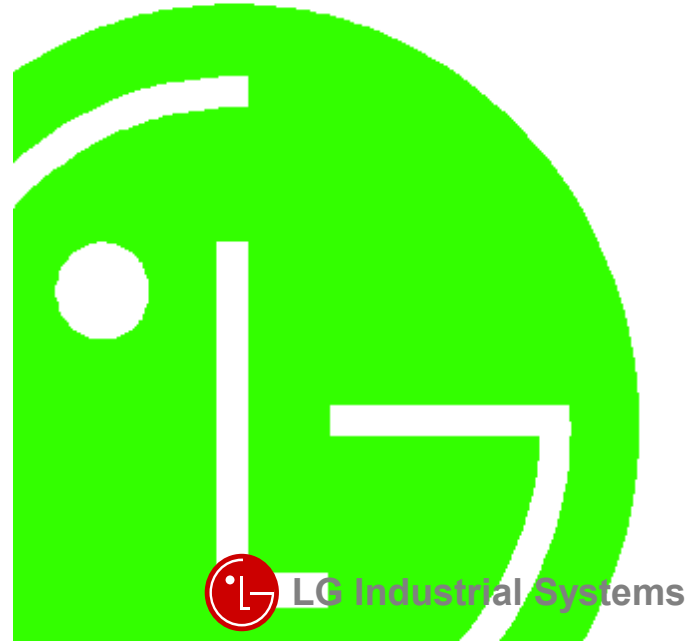

<p><b>Beijing Branch</b> LG Industrial Systems Elevator Co., Ltd. T : +86-10-6462-3256 F : +86-10-6462-3255</p> <p><b>Bogota Branch</b> LG Industrial Systems de Colombia S.A. T : +57-1-310-6077 F : +57-1-310-5831</p> <p><b>Dalian Branch</b> Dalian LG Industrial Systems Co., Ltd. T : +86-411-281-2579 F : +86-411-281-2578</p> <p><b>Hong Kong Branch</b> LG Industrial Systems (HK) Ltd. T : +852-2598-6615 F : +852-2598-7105</p> <p><b>Singapore Branch</b> LG Industrial Systems Co., Ltd. T : +65-323-7361 F : +65-323-7362</p> <p><b>Tokyo Branch</b> LG Industrial Systems Co., Ltd. Tokyo Office T : +81-3-3589-6362 F : +81-3-3588-1810</p>	<p><b>Bangkok Branch</b> LG Industrial Systems (Thailand) Co., Ltd. T : +66-2-381-8443 F : +66-2-381-8445</p> <p><b>Chicago Branch</b> LG Industrial Systems Co., Ltd. Chicago Office T : +1-708-692-4500 F : +1-708-692-4501</p> <p><b>Hanoi Branch</b> LG Industrial Systems Co., Ltd. Hanoi Office T : +64-4-821-0388 F : +64-4-821-0399</p> <p><b>Shanghai Branch</b> Shanghai LG Industrial Systems Co., Ltd. T : +86-21-6248-2710 F : +86-216248-3236</p> <p><b>Taipei Branch</b> LG Industrial Systems (Taiwan) Co. Ltd. T : +886-2-516-5010 F : +886-2-516-5035</p>
---	---

**LG Industrial Systems Co., Ltd.**  
 ● Head Office  
 LG Mullae Building 9th F, 10, Mullae-dong 6-ga, Yongdungpo-gu, Seoul, KOREA  
 Tel : +82-2-2006-3751~6 Fax : +82-2-2006-3951  
 Home page : <http://www.lgis.lg.co.kr/fa>

Before handling the product

Read this data sheet carefully prior to any operation, mounting, installation or start-up of the product.

Materials for MASTER-K

Name	Code
MASTER-K KGL-WIN (Programming Software)	702005036
MASTER-K (Instructions & programming)	702006539
MASTER-K CPU User's Manual	702006391
MASTER-K K3F-AD2A/K4F-AD3A/K7F-AD3A Manual	702006448

Name	Code
MASTER-K K3F-AD2A Data Sheet	702006211

Safety Precautions

Be sure to read carefully the safety precautions given in data sheet and user's manual before operating the module and follow them. The precautions explained here only apply to the K3F-AD2A. For safety precautions on the PLC system, see the MASTER-K CPU User's Manual.

A precaution is given with a hazard alert triangular symbol to call your attention, and precautions are represented as follows according to the degree of hazard.

**WARNING** If not provided with proper prevention, it can cause death, fatal injury or considerable loss of property.

**CAUTION** If not properly observed, it can cause a hazard situation to result in severe or slight injury or a loss of property.

However, a precaution followed with **CAUTION** can also result in serious conditions. Both of two symbols indicate that an important content is mentioned, therefore, be sure to observe it. Keep this manual handy for your quick reference in necessary.

Design Precautions

**CAUTION**  
Do not run I/O signal lines near to high voltage line or power line. Separate them as 100 mm or more as possible. Otherwise, noise can cause module malfunction.

Installation Precautions

**CAUTION**  
Operate the PLC in the environment conditions given in the general specifications. If operated in other environment not specified in the general specifications, it can cause an electric shock, a fire, malfunction or damage or degradation of the module. Make sure the module fixing pro-jections is inserted into the module fixing hole and fixed. Improper installation of the module can cause malfunction, disorder or falling.

Wiring Precautions

**CAUTION**  
When grounding a FG terminal, be sure to provide class 3 grounding which is dedicated to the PLC. Before the PLC wiring, be sure to check the rated voltage and terminal arrangement for the module and observe them correctly. If a different power, not of the rated voltage, is applied or wrong wiring is provided, it can cause a fire or disorder of the module. Drive the terminal screws firmly to the defined torque. If loosely driven, it can cause short circuit, a fire or malfunction. Be careful that any foreign matter like wire scraps should not enter into the module. It can cause a fire, disorder or malfunction.

Test RUN and Maintenance Precautions

**CAUTION**  
Do not contact the terminals while the power is applied. It can cause malfunction. When cleaning or driving a terminal screw, perform them after the power has been turned off. Do not perform works while the power is applied, which can cause disorder or malfunction.

**WARNING**  
Do not separate the module from the printed circuit board(PCB), or do not remodel the module. They can cause disorder, malfunction, damage of the module or a fire. When mounting or dismounting the module, perform them after the power has been turned off. Do not perform works while the power is applied, which can cause disorder or malfunction.

Waste Disposal Precautions

**CAUTION**  
When disposing the module, do it as an industrial waste.

1. Introduction

The K3F-AD2A is analog/digital conversion module for use with the MASTER-K PLC K200S series CPU module. The A/D conversion module is to convert an analog input signal (voltage or current) from external sensors into a 12-bit signed Binary digital value.

2. General Specifications

No	Item	Specifications	Standard	
1	Operating temperature	0 ~ 55 °C		
2	Storage temperature	-25 ~ 70 °C		
3	Operating Humidity	5 ~ 95%RH, non-condensing		
4	Storage humidity	5 ~ 95%RH, non-condensing		
5	Vibration	Occasional vibration		
		Frequency	Acceleration	Amplitude
		10 ≤ f ≤ 57 Hz	-	0.075 mm
		57 ≤ f ≤ 150 Hz	9.8m/s² (1G)	-
		Continuous vibration		
		Frequency	Acceleration	Amplitude
10 ≤ f ≤ 57 Hz	-	0.035 mm		
57 ≤ f ≤ 150 Hz	4.9m/s² (0.5G)	-		
6	Shocks	*Maximum shock acceleration: 147m/s² (15G)		
		*Duration time :11 ms *Pulse wave: half sine wave pulse( 3 times in each of X, Y and Z directions )		
7	Noise immunity	Square wave impulse noise	± 1,500 V	
		Electrostatic discharge	Voltage :4kV(contact discharge)	
		Radiated electromagnetic field	27 ~ 500 MHz, 10 V/m	
		Fast transient & burst noise	Severity Level All power modules Digital I/Os ( Ue ≥ 24 V ) Digital I/Os ( Ue < 24 V ) Analog I/Os communication I/Os	
8	Atmosphere	Free from corrosive gases and excessive dust		
9	Altitude for use	Up to 2,000m		
10	Pollution degree	2 or lower		
11	Cooling method	Self-cooling		


3. Performance Specifications

Items	Specifications	
Analog input	Voltage	1 ~ 5 VDC (input resistance 1MΩ) 0 ~ 10VDC (input resistance 1MΩ) -10 ~ 10 VDC (input resistance 1MΩ)
	Current	DC 4 ~ 20 mA (input resistance 250Ω )
	Voltage/Current selection	*. Selection by Terminal Wiring (It has to be connected between V and I terminal to select current) *. Selection of voltage range by switch on the side of module
Digital output	*. 16-bit (data: 12bit)signed binary(-48 ~ 4047, -2048 ~ 2047) *. Digital Output value is selected by program	
Maximum resolution	1 ~ 5 VDC	1 mV (1/4000)
	0 ~ 10VDC	2.5mV(1/4000)
	-10 ~ 10 VDC	5 mV (1/4000)
	DC 4 ~ 20 mA	4μA (1/4000)
Overall Accuracy(%)	± 0.5% or lower (accuracy to full scale)	
Maximum conversion speed (ms/channel)	5.0ms / 1 channel	
Maximum absolute input	Voltage(V):15, Current (mA):25	
Number of analog input point	4 channels/module	
Isolation	Between input terminals and PLC: Photo coupler isolation (Between channels : Non-isolated)	
Terminals connected	18-point terminal block	
Internal current consumption(A)	+5VDC	40mA
	+15VDC	50mA
	-15VDC	20mA
Weight (g)	200g	

**CAUTION**  
The output range of K3S-304S is 0.5A with +15VDC and 0.2A with -15VDC. Make sure there total current consumption of A/D and D/A conversion modules. Do not exceed the output range capacity of power supply module(K3S-304S). The offset/gain value of A/D conversion module is fixed. The factory setting of output type is current output.

4. Parts Name and Functions

This following shows the names of parts and functions of K3F-AD2A module.

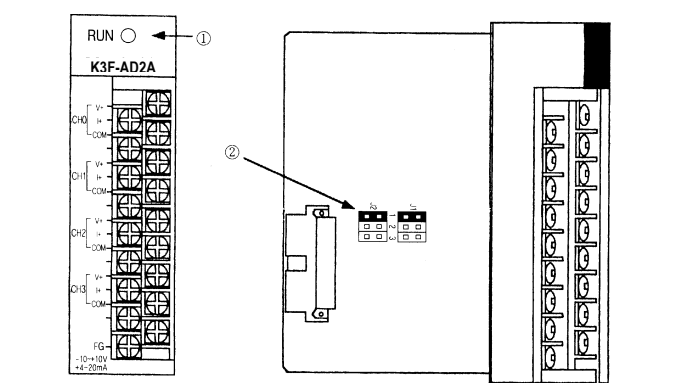

0	Description									
①	RUN LED Indicates the operating status of the K3F-AD2A.									
②	Selection Switch of Voltage/Current									
	<table border="1"> <thead> <tr> <th>Analog Input</th> <th>Input Range Selection Switch</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Voltage</td> <td>1 ~ 5VDC J1 J2</td> </tr> <tr> <td>0 ~ 10VDC J1 J2</td> </tr> <tr> <td rowspan="2">Current</td> <td>-10 ~ 10VDC J1 J2</td> </tr> <tr> <td>4 ~ 20mADC J1 J2</td> </tr> </tbody> </table>		Analog Input	Input Range Selection Switch	Voltage	1 ~ 5VDC J1 J2	0 ~ 10VDC J1 J2	Current	-10 ~ 10VDC J1 J2	4 ~ 20mADC J1 J2
	Analog Input	Input Range Selection Switch								
	Voltage	1 ~ 5VDC J1 J2								
0 ~ 10VDC J1 J2										
Current	-10 ~ 10VDC J1 J2									
	4 ~ 20mADC J1 J2									

## 5. Handling Precautions

From unpacking to installation, be sure to check the following:

- 1) Do not drop it off, and make sure that strong impacts should not be applied.
- 2) Do not dismount printed circuit boards from the case. It can cause malfunctions.
- 3) During wiring, be sure to check any foreign matter like wire scraps should not enter into the upper side of the PLC, and in the event that foreign matter entered into it, always eliminate it.
- 4) Be sure to disconnect electrical power before mounting or dismantling the module.


## 6. Wiring

### 6.1 Wiring Precaution


- 1) Separate AC and external input signal of A/D conversion module wiring not to be affected by surge or induced noise in the AC.
- 2) External wiring has to be at least AWG22(0.3 mm<sup>2</sup>) and be selected in consideration of operating ambience and/or allowable current.
- 3) Separate wiring from devices and/or substances generating intense heat, and oil not to make short-circuit which leads to damage and/or mis-operation.
- 4) Identify the polarity of terminal block before external power supply is made connected.
- 5) Separate external wiring sufficiently from high voltage and power supply cable not to cause induced failure and/or malfunction.

### 6.2 Wiring example

- 1) Voltage Input(DC-10~10V)

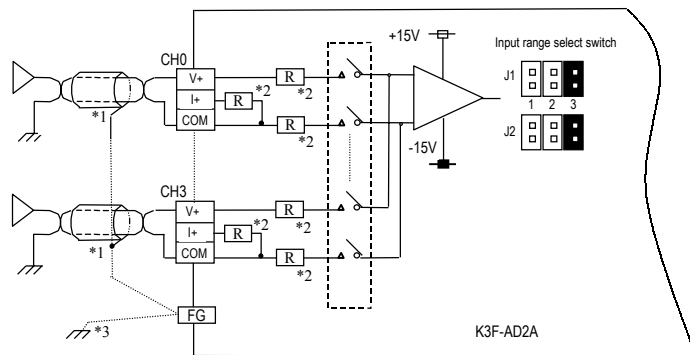

- 2) Current Input(DC4~20 mA)

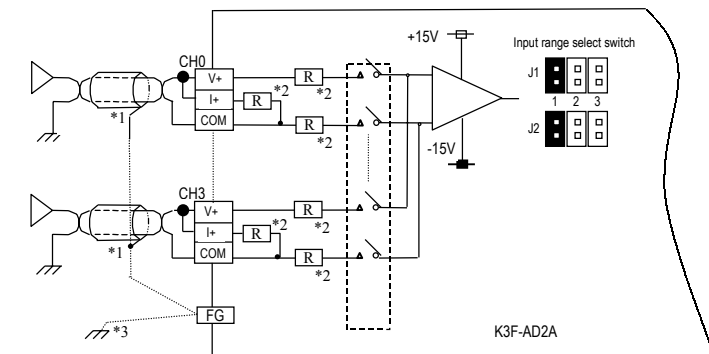


\*1 For the cable, use a two-core twisted shielded wire.

\*2 Input resistance has been shown.

\*3 When there is much noise, FG of the power supply module must be grounded.

## 7. Dimension

(Unit : mm)

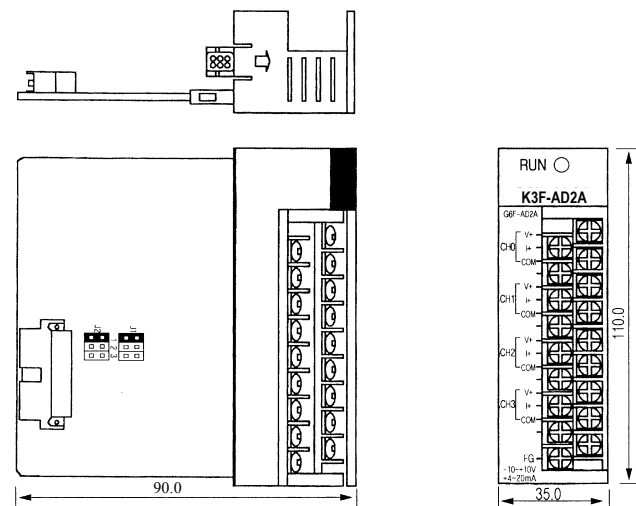

MEMO

MEMO

MEMO

MEMO

MEMO